

KRAIBURG WELA / WELA Puzzle

prerequisites:



concrete area:

- no holes
- no elevations
- with at least a 3 % slope

mats:


even temperature: minimum 5° C to maximum 30° C (store according to initial temperature)




for animal well-being some litter is necessary to absorb moisture (e.g. soft milled straw or mineral material)

You will need this:


measuring:

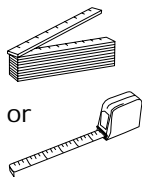


marking:

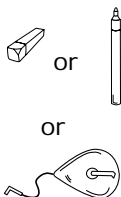

cutting:

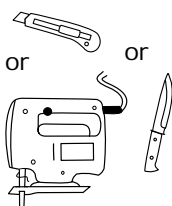

drilling and installing:

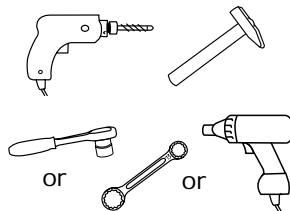


KRAIBURG fastening elements:



- framing plugs ø 10 x 80 mm with
- hexagon screw (SW 13) - A2
 - washer ø 40 mm - A2

(fastening elements are part of delivery)

1 Placement line

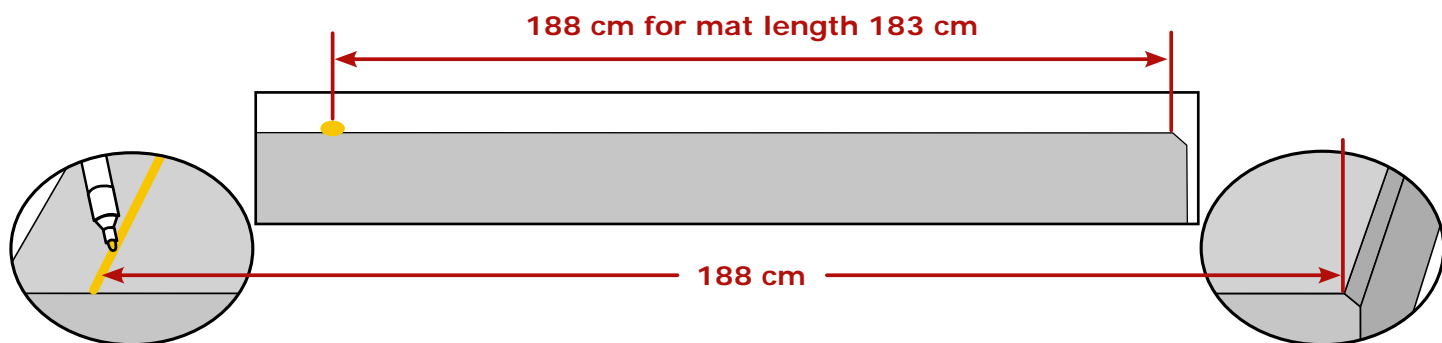


draw placement line in the front
Tip: use a chalk line

measure from the rear concrete edge

2 Lay out mat row completely


i Start from the middle of the cubicle row and install to the right and to the left

prepare to fasten at the front

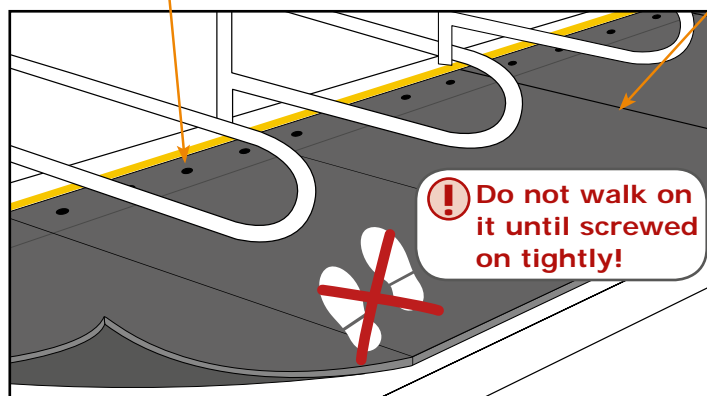

! Do not walk on it until screwed on tightly!

puzzle seam, i.e. joint, more or less under the divider (max. +/- 8 cm)

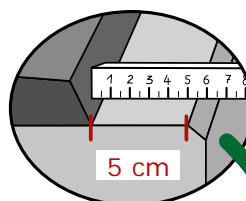

rear concrete edge:
5 cm installation distance!




The distance will decrease considerably within the first days after installation.


Appropriate installation may differ due to local conditions. Therefore the manufacturer is not liable for installation




to ② Lay out mat row completely

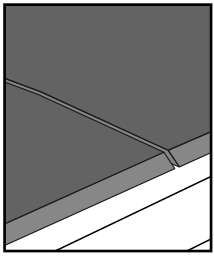


adjoin mats
loosely

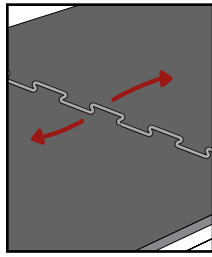

join puzzle mats loosely,
lift them slightly and gently
pull them apart

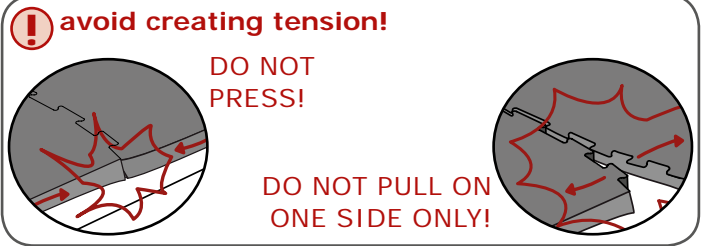


③ Fastening

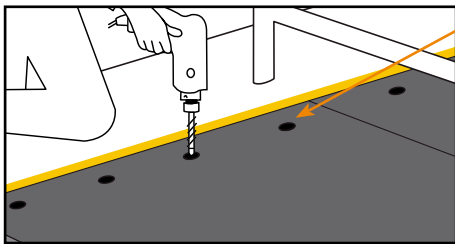


fasten 4 x at the front edge through the
prefabricated fastening points


**! Make sure the front edge
of the mat is on the
marking. If necessary,
readjust.**

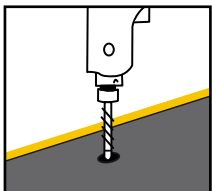

drill

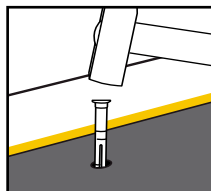

pound the
plastic plugs
in flush

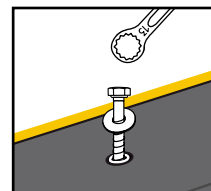

fasten screws
and washers
until they are
seated evenly
fast. **Do not
overtighten!**